

ELECTRONIC DISPLAYS INC.

135 S. CHURCH STREET
ADDISON, ILL. 60101
www.electronicdisplays.com



Single Line Unit Quick Startup Procedure

Models: EDV111-780-MC / EDV111-7120-MC



EDV111 (Single line unit) startup procedures (also called E1000 software, Message Central)

Note: This document is meant to supplement the documentation on the CD **not** replace it. Please refer to CD for complete documentation.

Table of contents

Establishing communications with a single line unit (RS232)	page 2
Sending a message to a single line unit (RS232)	page 3
Using the remote control to send a message	page 4

Establishing communications with single-line unit, (also called E1000 software, Message Central)

1. Click on icon to open **Electronic Message Center Setup**
 - a. Choose either **monochrome** or **bi-color**
 - b. Choose **pixel count** (width)
 - c. Hit **OK**
2. Open **Communication Settings**
 - a. Select **Device Settings**
 - b. Choose **New Device**; enter Name, click **OK**, enter appropriate **COMM** port and **Baud rate** (usually **2400**), Hit **OK**, close window
3. Open **Communication Settings**
 - a. Select **Site Settings**
 - b. Choose **New Site**, enter Name, click **OK**, enter appropriate **Sign Address** (usually 1 if a single sign), hit **OK**, close window.
4. Open **Send**
 - a. **Run Test Sequence**, hit **OK**, (if you don't get a test sequence on the display, check all your previous settings. You must establish communications to the display before proceeding with sending messages.

Some things to check if you can't communicate with display:

Does the display have power?

Is the display cabled to the appropriate **COMM** port?

Is the correct **COMM** port and **Baud rate** (usually **2400**) configured in your previous steps in **Device Settings**?

Is the correct **Sign Address** configured in **Site Settings**, (usually 1)?

Sending a message to a single-line unit, (also called E1000 software, Message Central)

1. Click on icon to open **Electronic Message Center Setup**
 - a. Choose either **monochrome** or **bi-color**
 - b. Choose **pixel count** (width)
 - c. Hit **OK**
2. **Message Central** window opens
 - a. Click **Insert**, click **Transition Effect**
 - b. Select **Transition Effect**
 - c. Click **Insert**
3. Enter a message (not saving message)
 - a. Click on **Send**
 - b. Click on **Send current message workspace contents** (a **Warning?** message appears)
 - c. Click **No** if not yet ready to save, Send Option window appears
 - d. Select appropriate site, click **OK** to send message to display
4. Enter a message (saving message)
 - a. Click on **Send**
 - b. Click on **Send current message workspace contents** (a **Warning?** message appears)
 - c. Click **Yes, Save As** window appears
 - d. Save as a **.SDV** file, (for example **test.SDV**)
 - e. Click **Save**, window closes
 - f. Select appropriate site, click **OK** to send message to display

REMOTE CONTROL (Buttons and meaning)

Button on remote	Name/Use
O	Turn display on or off
PROG	Enter program mode
MET	Select method (called transition effects on computer)
PAU	Add a pause
CAP	Select capitals
CLR	Del All (caution, this clears ALL display memory, use ESC if not what you want)
RUN	To run a display message
CPW	This key is currently unused
PREV	Previous choice
NEXT	Next choice
TIME	To set or add time and date
FONT	To select a font
COL	To select a color
SPE	To select speed for display scrolling
SYM	To select a predefined symbol
GRA	To select from a customer provided graphic
PHR	To select from a predefined phrase
BEEP	To add a beep selection
DEL	To delete an entry
ENT	To enter
INS	To insert text, symbol, graphic or phrase
ESC	To escape out of a selection
SPA	To enter a space
ALT	To enter an alternate character (<>/() ,etc)

**Using the remote control to send a message
(This is a sample file)**

PROG
Enter file 01
ENT
Set method using NEXT
Type phrase GARY
COL to change color
Use NEXT
Type phrase TEST
RUN
Save Y