# ELECTRONIC DISPLAYS INC.

135 S. CHURCH STREET

ADDISON, ILL. 60101

### www.electronicdisplays.com



## Changing the Size of the an EDV111-IND Message Sign Through PC Software The latest PC software update is LMOS 2.01.20 Connect the Display to the PC/ Laptop Open the WZP Sign Software Program. Go to: Go to "Sign Config" Tab. Select "Color Type" (Default of "Tri-Color for indoor models). Single Color (for outdoor signs) Set the Width to the number of pixels wide (example: 32 x 128) Width is 128 Set the Height to the number of pixels high (example: 32 x 128) Height is 32

Image: Comment Window Help         Image: Image: Comment Help         Image: Image: Comment Help         Image: Image: Comment Help         Image: Image: Comment Help         Image: Image: Image: Image: Comment Help         Image: I
Sign Config Ferrierial MCS: Display Board Auto DN/OFF Date & Time   Differs  Colour Type Single Calcur Address 1 Group 1 Widh 240 Height 322 DK. Cancel Defaults
Sign Config Sign Config Sign Config Sign Config Sign Config Sign Config Sign Config Sign Config Colour Type Single Colour Address 1 Single Colour Address 1 Single To With 240 Height 32 OK Carcel Defaults
Sign Config         Observed         Sign Config
Sign Config
Sign Config         Sign Config         Sign Config         McS       Display Board Auto DN/DFF         Address         Address         Group         Height         32
Sign Config
Sign Config         Colour Type         Address         Broup         Broup         Wide         Height         32
Sign Config
Image: Single Colour       Image: Single Colour         Address       Image: Single Colour         Address       Image: Single Colour         Vidan       240         Height       32
Colou Type Single Colour
Colour Type Single Colour  Address  Address  Group  1  Group  1  Height  32   DK  Cancel  Default
Addess 1 Group 1 With 240 Height 32 DK Earcel Defaults
Group 1 Wolth 240 Height 32 DK Cancel Defaults
Woth  240 Height  32
DK Earcel Default
OK Carcel Default
DK Carcel Default
DK Earcel Defaults
OK Cancel Defaults
OK Cancel Default:
OK Cancel Defaults

## To Enable the "No Communication Warning Message "

Select the "Others" tab

Select "Enable No Comms Warning"

		_
WZP Sign Software		- 0 ×
File Comm Window Help		
Page 1/1 Row 1, Col 1 Inset	Sign Config         General MCS       Display Board Auto DN/OFF         Disbuto       Disbuto         IF Show Baudate       Show Sign Addess         IF Show Sign Addess       Show Sign Size         IF Show Sign Size       Disbuto Souten Beep         No data reterion during gower down       Enable No COMMS warring         Enable No CoMMS warring       Enable No CoMMS warring         Enable No CoMMS warring       Ditable Power on dealy         OK       Cancel	
🔊 🥖 🚞 Wind., 👩 The Ea., 🗴 🚺 🚺	🔽 Outl. 🕐 EDV11. W Word 🕕 Electro. RunDLL 🔑 Examp. 💏 WZP S. 12 (S. N) 🛪 🗟 🕂 🛠 🐼 🖓 🖛 🐼 🛦 🖅 🖉 🗈	11:22 AM
		4/24/2020

#### Verify Update:

While the display is in communication with the display, Go to the "Sign Info" tab.

You should see the latest software name / the size of the sign and the font.