

ELECTRONIC DISPLAYS INC.

www.electronicdisplays.com



Time Zone Display IR Remote Operation



HOME BUTTON

UP/DOWN BUTTONS

To Change Time:

Press "HOME BUTTON"

Press "UP ARROW" to go through selections

First Press Will Allow Month Change

NOTE: PRESS "HOME BUTTON AFTER EACH SELECTION"

Second Press Will Allow Days Change

Third Press Will Allow Year Change

Fourth Press Will Allow Hours Change in 24 Hour Format

Fifth Press Will Allow Minutes Change

Sixth Press Will Allow Seconds Change