



SHOP  
WIRING →

## ED206-104-4D-N1 &amp; N12

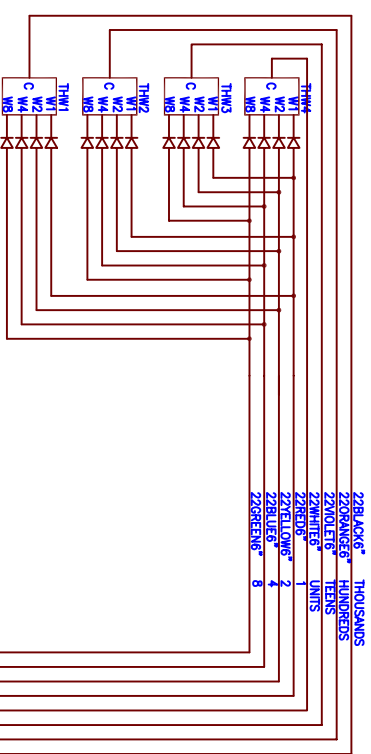

NOTE:  
—USE DIODES 1N941S FOR  
THUMBWHEEL SWITCHES  
WIRES SOLDERED DIRECTLY  
TO PCB  
—FOR THUMBWHEELS ASSEMBLY  
SEE "GREEN BOOK"

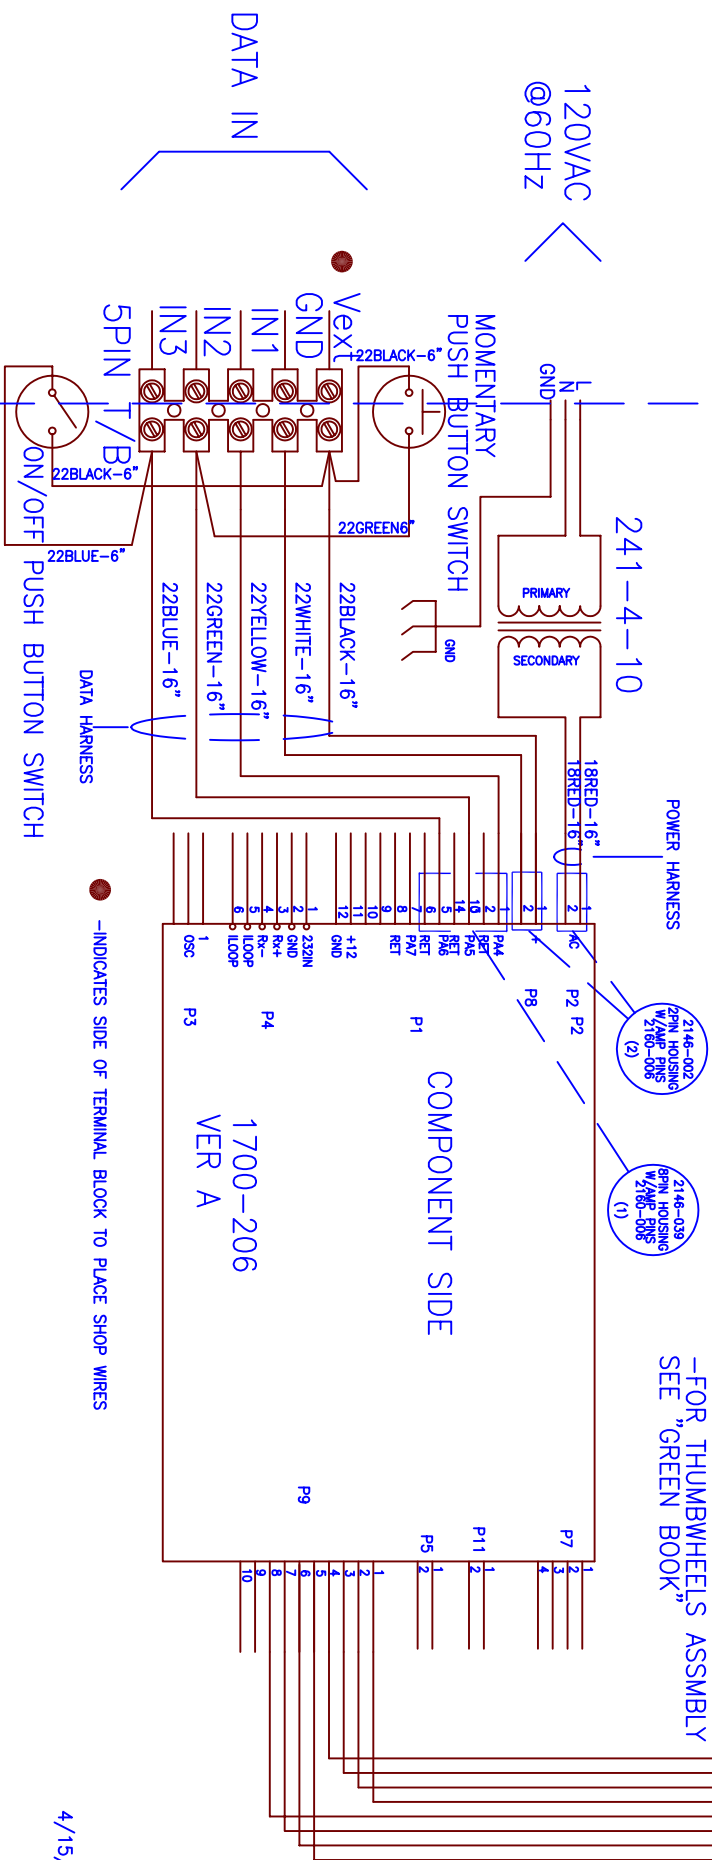

4/15/99